

# Quattro Inverter/Charger

Lithium Ion battery compatible

www.victronenergv.com



**Ouattro** 48/5000/70-100/100



Quattro 48/15000/200-100/100

#### Two AC inputs with integrated transfer switch

The Quattro can be connected to two independent AC sources, for example the public grid and a generator, or two generators. The Quattro will automatically connect to the active source.

The main output has no-break functionality. The Quattro takes over the supply to the connected loads in the event of a grid failure or when shore/generator power is disconnected. This happens so fast (less than 20 milliseconds) that computers and other electronic equipment will continue to operate without disruption.

The second output is live only when AC is available on one of the inputs of the Quattro. Loads that should not discharge the battery, like a water heater for example, can be connected to this output.

#### Virtually unlimited power thanks to parallel operation

Up to 6 Quattro units can operate in parallel. Six units 48/10000/140, for example, will provide 48kW / 60kVA output power and 840 Amps charging capacity.

#### Split phase options

Two units can be stacked to provide 120-0-120V, and additional units can be paralleled up to a total of 6 units per phase, to supply up to 30kW / 36kVA of split phase power.

Alternatively, a split phase AC source can be obtained by connecting our autotransformer (see data sheet on www.victronenergy.com) to a 'European' inverter programmed to supply 240V / 60Hz.

#### Three phase capability

Three units can be configured for three phase output. But that's not all: up to 6 sets of three units can be parallel connected to provide 144kW / 180kVA inverter power and more than 2500A charging capacity.

#### PowerControl – Dealing with limited generator, shore side or grid power

The Quattro is a very powerful battery charger. It will therefore draw a lot of current from the generator or shore side supply (16A per 5kVA Quattro at 230VAC). A current limit can be set on each AC input. The Quattro will then take account of other AC loads and use whatever is spare for charging, thus preventing the generator or mains supply from being overloaded.

#### PowerAssist - Boosting shore or generator power

This feature takes the principle of PowerControl to a further dimension allowing the Quattro to supplement the capacity of the alternative source. Where peak power is so often required only for a limited period, the Quattro will make sure that insufficient mains or generator power is immediately compensated for by power from the battery. When the load reduces, the spare power is used to recharge the battery.

#### Solar energy: AC power available even during a grid failure

The Quattro can be used in off grid as well as grid connected PV and other alternative energy systems. Loss of mains detection software is available.

#### **System configuring**

- In case of a stand-alone application, if settings have to be changed, this can be done in a matter of minutes with a DIP switch setting procedure.
- Parallel and three phase applications can be configured with VE.Bus Quick Configure and VE.Bus System
- Off grid, grid interactive and self-consumption applications, involving grid-tie inverters and/or MPPT Solar Chargers can be configured with Assistants (dedicated software for specific applications).

#### On-site Monitoring and control

Several options are available: Battery Monitor, Multi Control Panel, Color Control GX or other GX devices, smartphone or tablet (Bluetooth Smart), laptop or computer (USB or RS232).

### **Remote Monitoring and control**


Color Control GX or other GX devices.

Data can be stored and displayed on our VRM (Victron Remote Management) website, free of charge.

When connected to the Ethernet, systems with a Color Control GX or other GX device can be accessed and settings can be changed remotely.



Color Control GX, showing a PV application

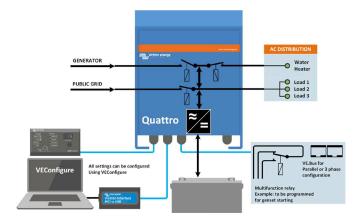

	2x100 INVERTER 9,	Yes Yes Yes 265 VAC Input frequency: 2×100  55 - 17V 19 - 33V 38 - 2: 230 VAC ± 2% Freque 8000 6500 5500 3600 16000 94 / 96 60 / 60 40 / 40 15 / 15  28,8 / 57,6	2x100	1 2x100 15000 12000 10000 7000 25000 96 110 75 20
000 400 200 700 000 / 94 / 20 / 15 / 10 / 28,8 / 27,6 / 26,4	2x100  INVERTER  9,  Output voltage 5000 4000 3700 3000 10000 94/94/95 30/30/35 20/25/30 10/10/15  CHARGER  14,4/28,8/57,6	265 VAC Input frequency: 2x100  2x100  35 - 17V 19 - 33V 38 - 2: 230 VAC ± 2% Freque 8000 6500 5500 3600 16000 94 / 96 60 / 60 40 / 40 15 / 15	2x100  66V  ncy: 50 Hz ± 0,1%  10000  8000  6500  4500  20000  96  60  40	15000 12000 10000 7000 25000 96 110 75
000 400 200 700 000 / 94 / 20 / 15 / 10 / 28,8 / 27,6 / 26,4	2x100  INVERTER  9,  Output voltage 5000 4000 3700 3000 10000 94/94/95 30/30/35 20/25/30 10/10/15  CHARGER  14,4/28,8/57,6	2x100  2x100  35 - 17V	2x100  66V  ncy: 50 Hz ± 0,1%  10000  8000  6500  4500  20000  96  60  40	15000 12000 10000 7000 25000 96 110 75
000 400 200 700 000 / 94 / 20 / 15 / 10 / 28,8 / 27,6 / 26,4	2x100  INVERTER  9,  Output voltage 5000 4000 3700 3000 10000 94/94/95 30/30/35 20/25/30 10/10/15  CHARGER  14,4/28,8/57,6	2x100  2x100  35 - 17V	2x100  66V  ncy: 50 Hz ± 0,1%  10000  8000  6500  4500  20000  96  60  40	15000 12000 10000 7000 25000 96 110 75
/400 /200 /700 /000 /94 /20 /15 /10 /28,8 /27,6 /26,4	INVERTER  9,  Output voltage 5000 4000 3700 3000 10000 94/94/95 30/30/35 20/25/30 10/10/15  CHARGER  14,4/28,8/57,6	,5 – 17V 19 – 33V 38 – e: 230 VAC ± 2% Freque 8000 6500 5500 3600 16000 94 / 96 60 / 60 40 / 40 15 / 15	66V ncy: 50 Hz ± 0,1% 10000 8000 6500 4500 20000 96 60 40	12000 10000 7000 25000 96 110 75
/400 /200 /700 /000 /94 /20 /15 /10 /28,8 /27,6 /26,4	Output voltage 5000 4000 3700 3000 10000 94/94/95 30/30/35 20/25/30 10/10/15 CHARGER 14,4/28,8/57,6	2: 230 VAC ± 2% Freque 8000 6500 5500 3600 16000 94 / 96 60 / 60 40 / 40 15 / 15	ncy: 50 Hz ± 0,1% 10000 8000 6500 4500 20000 96 60 40	12000 10000 7000 25000 96 110 75
/400 /200 /700 /000 /94 /20 /15 /10 /28,8 /27,6 /26,4	5000 4000 3700 3000 10000 94/94/95 30/30/35 20/25/30 10/10/15 CHARGER 14,4/28,8/57,6	8000 6500 5500 3600 16000 94/96 60/60 40/40 15/15	10000 8000 6500 4500 20000 96 60	12000 10000 7000 25000 96 110 75
/400 /200 /700 /000 /94 /20 /15 /10 /28,8 /27,6 /26,4	4000 3700 3000 10000 94/94/95 30/30/35 20/25/30 10/10/15 CHARGER 14,4/28,8/57,6	6500 5500 3600 16000 94 / 96 60 / 60 40 / 40 15 / 15	8000 6500 4500 20000 96 60 40	12000 10000 7000 25000 96 110 75
200 700 000 /94 /20 /15 /10 /28,8 /27,6 /26,4	3700 3000 10000 94/94/95 30/30/35 20/25/30 10/10/15 CHARGER 14,4/28,8/57,6	5500 3600 16000 94 / 96 60 / 60 40 / 40 15 / 15	6500 4500 20000 96 60 40	10000 7000 25000 96 110 75
/ 20 / 94 / 20 / 15 / 10 / 28,8 / 27,6 / 26,4	3000 10000 94/94/95 30/30/35 20/25/30 10/10/15 CHARGER 14,4/28,8/57,6	3600 16000 94/96 60/60 40/40 15/15	4500 20000 96 60 40	7000 25000 96 110 75
/ 20 / 94 / 20 / 15 / 10 / 28,8 / 27,6 / 26,4	3000 10000 94/94/95 30/30/35 20/25/30 10/10/15 CHARGER 14,4/28,8/57,6	3600 16000 94/96 60/60 40/40 15/15	4500 20000 96 60 40	7000 25000 96 110 75
/ 94 / 20 / 15 / 10 / 28,8 / 27,6 / 26,4	94/94/95 30/30/35 20/25/30 10/10/15 CHARGER 14,4/28,8/57,6	94 / 96 60 / 60 40 / 40 15 / 15	96 60 40	96 110 75
/ 94 / 20 / 15 / 10 / 28,8 / 27,6 / 26,4	94/94/95 30/30/35 20/25/30 10/10/15 CHARGER 14,4/28,8/57,6	94 / 96 60 / 60 40 / 40 15 / 15	96 60 40	96 110 75
/ 20 / 15 / 10 / 28,8 / 27,6 / 26,4	30/30/35 20/25/30 10/10/15 CHARGER 14,4/28,8/57,6	60 / 60 40 / 40 15 / 15	40	75
/ 15 / 10 / 28,8 / 27,6 / 26,4	20 / 25 / 30 10 / 10 / 15 CHARGER 14,4 / 28,8 / 57,6	40 / 40 15 / 15	40	75
/ 10 / 28,8 / 27,6 / 26,4	10 / 10 / 15 CHARGER 14,4 / 28,8 / 57,6	15 / 15		
/ 28,8 / 27,6 / 26,4	CHARGER 14,4 / 28,8 / 57,6		15	20
/ 27,6 / 26,4	14,4 / 28,8 / 57,6	28.8 / 57.6		
/ 27,6 / 26,4		ZO.O / J/.U	57,6	57,6
/ 26,4	15/5/ 2//5/ 55/2	27,6 / 55,2	55,2	55,2
	13,2 / 26,4 / 52,8	26,4 / 52,8	52,8	52,8
11/11	220 / 120 / 70	200 / 110	140	200
,,,,	2207 1207 70	4 (12V and 24V models onl		200
		Yes	<i>"</i>	
	GENERAL	163		
25	50	50	50	50
3x	3x	3x	3x	3x
		a-q		
For	r parallel and three phas	se operation, remote monit	oring and system integration	on
2x	2x	2x	2x	2x
		Yes		
	Operating temp.: -40	to +65°C Humidity (non-	condensing): max. 95%	
	ENCLOSURE	* -	<u> </u>	
	Material & Colour: alui	minium (blue RAL 5012) P	rotection category: IP 21	
	Four M8	bolts (2 plus and 2 minus co	onnections)	
ninals 13 mm² AWG)	Bolts M6	Bolts M6	Bolts M6	Bolts M6
19	34/30/30	45 / 41	51	72
58 x 218	470 x 350 x 280 444 x 328 x 240	470 x 350 x 280	470 x 350 x 280	572 x 488 x 344
FN 5504.4.4		,		2 150 (4000 6 2
EN 55014-1,	, EN 55014-2, EN-IEC 610			2, IEC 61000-6-3
			R10-4	
ıest	<ul><li>4) At 25°C ambient</li><li>5) Switches off when r</li><li>6) Programmable relation</li><li>DC under voltage of</li></ul>	est factor 3:1 no external AC source available y that can a.o. be set for general r genset start/stop function	alarm,	
	258 x 218	470 x 350 x 280 444 x 328 x 240 444 x 328 x 240 STANDARD: EN-IEC 6 EN 55014-1, EN 55014-2, EN-IEC 610 uest  3) Non-linear load, cre 4) At 25°C ambient 5) Switches off when 1 6) Programmable rela DC under voltage 0 AC rating: 230 V / 4	470 x 350 x 280 444 x 328 x 240 444 x 328 x 240 470 x 350 x 280 444 x 328 x 240 STANDARDS EN-IEC 60335-1, EN-IEC 60335-2-29, EN 55014-1, EN 55014-2, EN-IEC 61000-3-2, EN-IEC 61000-3-3, I 12V and 24V models: ECE See our website 3) Non-linear load, crest factor 3:1 4) At 25°C ambient 5) Switches off when no external AC source available	470 x 350 x 280 444 x 328 x 240 444 x 328 x 240 470 x 350 x 280 470 x 280 x 280 470 x 280 x 280 470 x 280 x 280 470 x



#### **Digital Multi Control Panel**

A convenient and low cost solution for remote monitoring, with a rotary knob to set PowerControl and PowerAssist levels.



### **VE.Bus Smart Dongle**

Measures battery voltage and temperature and allows monitoring and control of Multis and Quattros with a smartphone or other

Bluetooth enabled device.



## Computer controlled operation and monitoring

Several interfaces are available:



# Color Control GX and other GX devices

Monitoring and control. Locally, and also remotely on the <u>VRM Portal.</u>



### MK3-USB (VE.Bus to USB interface)

Connects to a USB port (see 'A guide to VEConfigure')



### VE.Bus to NMEA 2000 interface

Connects the device to a NMEA2000 marine electronics network. See the NMEA2000 & MFD integration guide



#### BMV-712 Smart Battery Monitor

Use a smartphone or other Bluetooth enabled device to:

- customize settings,
- monitor all important data on single screen,
- view historical data, and to
- update the software when new features become available.

